




IAW15 / MIU1 / MIU G3 / RIU1 / AC19I / AC20I / AC24I / AC25I / AC27I / AC32I / PGN04 controllers can be accessed by K-Line of a diagnostic connector without dismounting them from scooter.



Diagnostic connector is located under the seat and is covered with a protective cap.



Connect **GREEN** wire to pin 3 of diagnostic connector and **RED (+12V) / BLACK (GROUND)** crocodile clip terminals to the scooter's battery.



Set ignition switch to **ON** position.

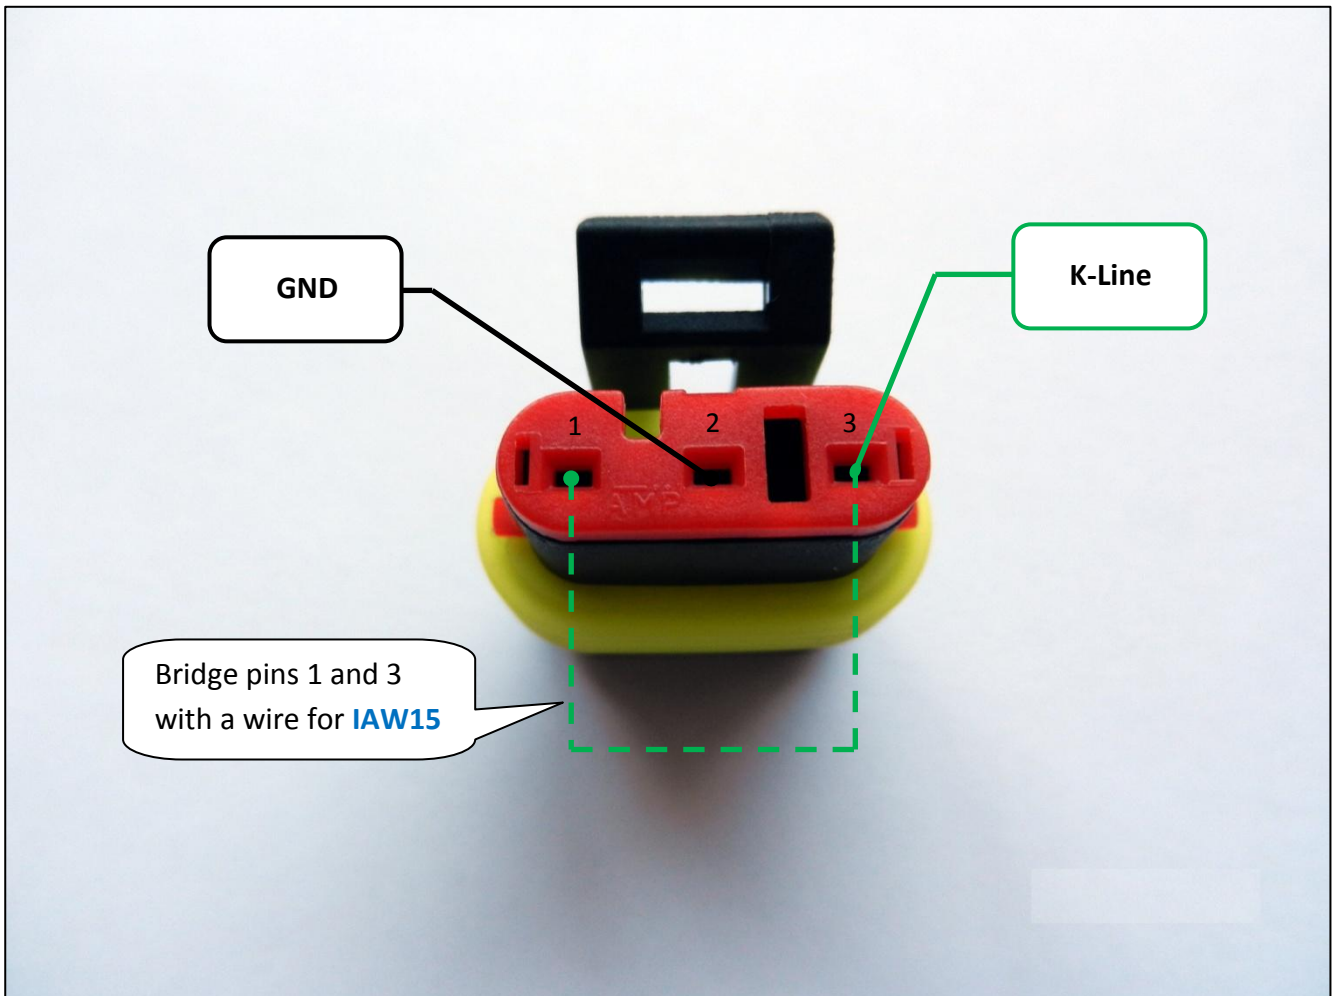


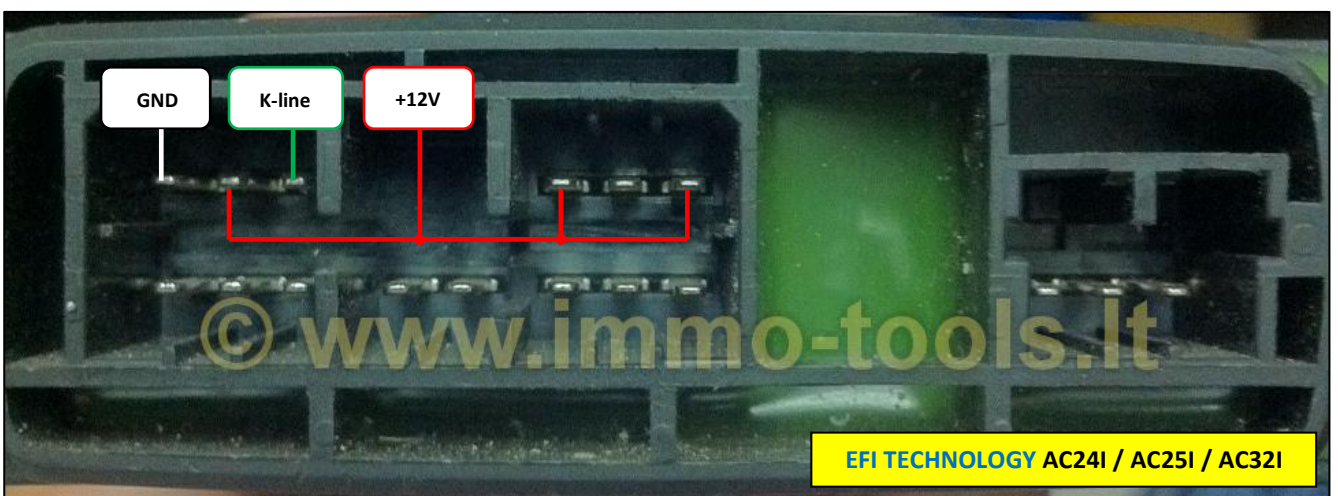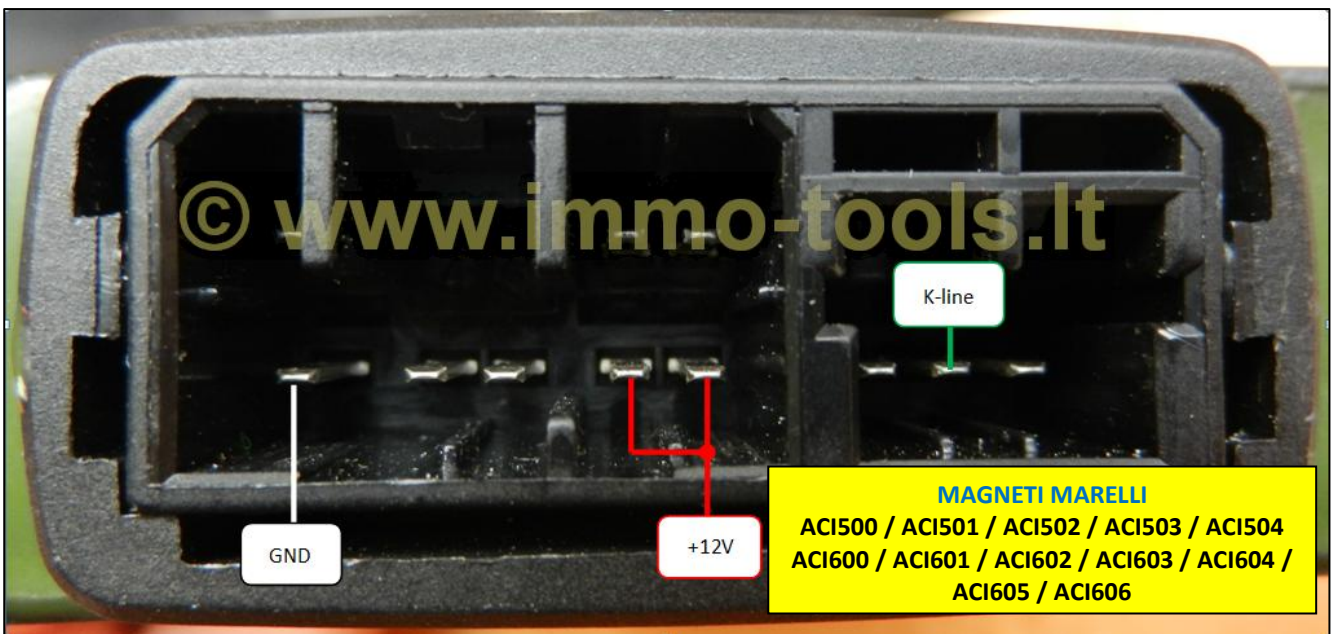


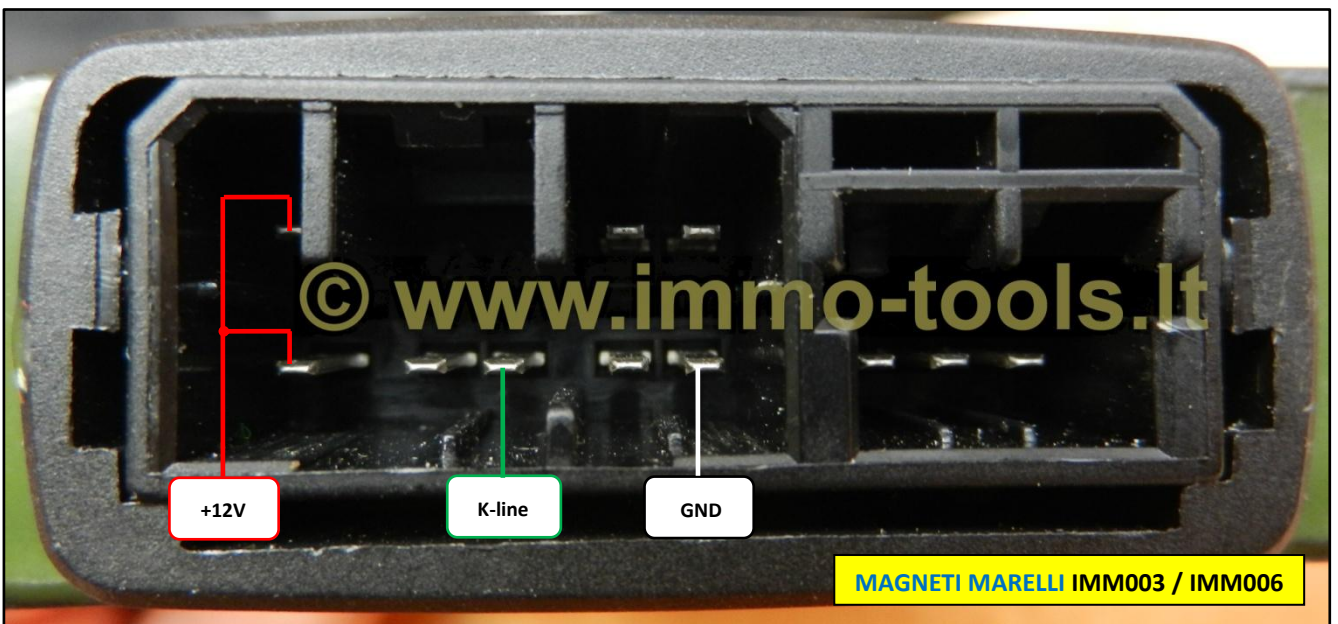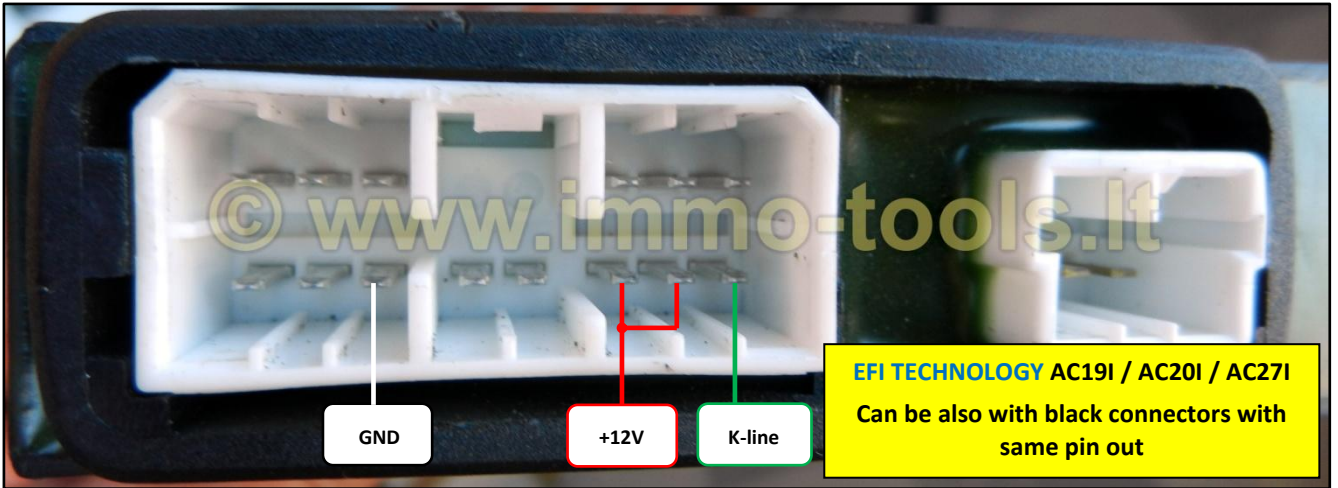

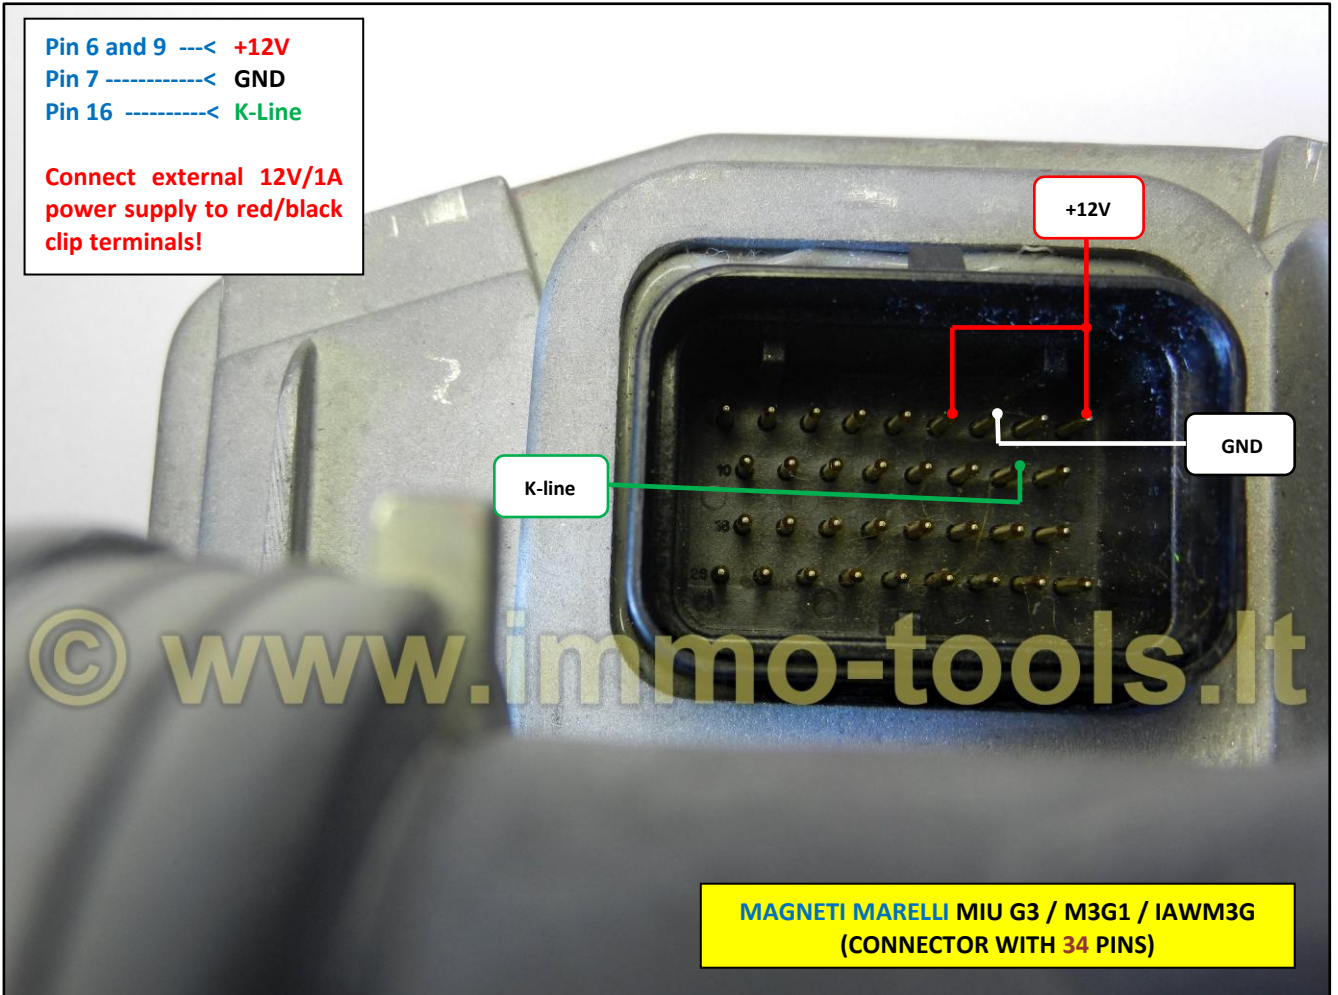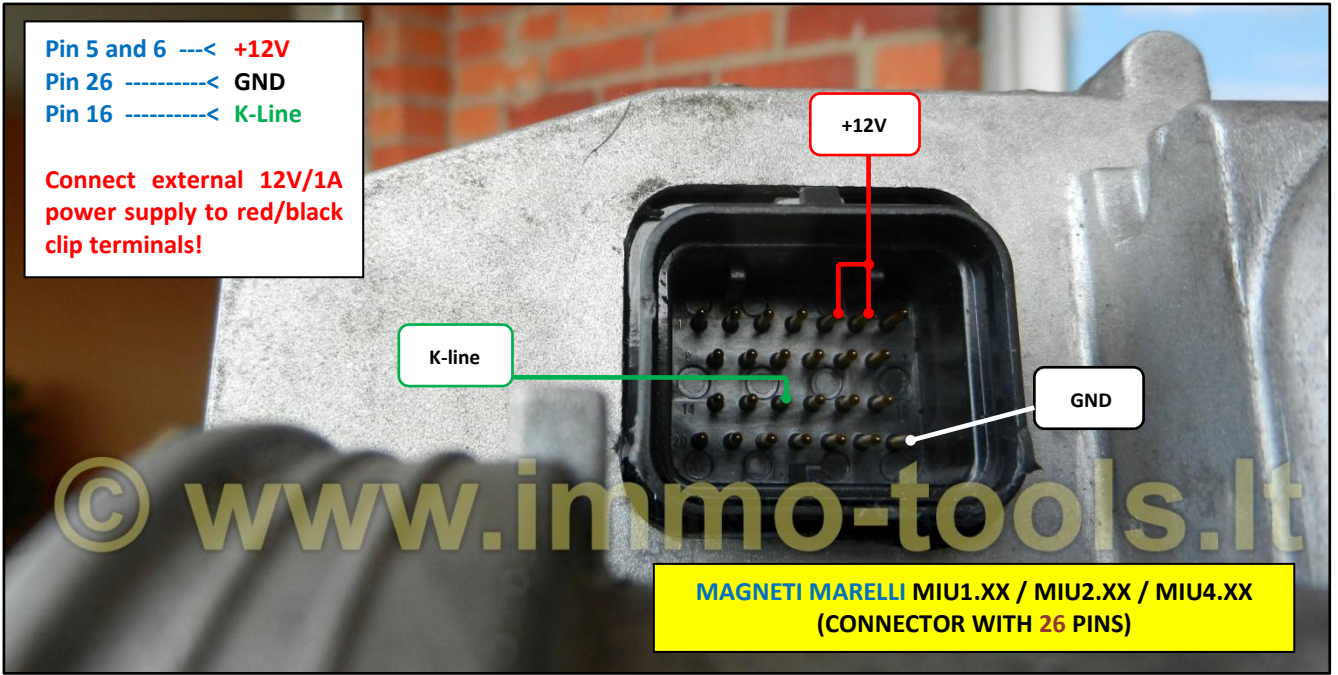

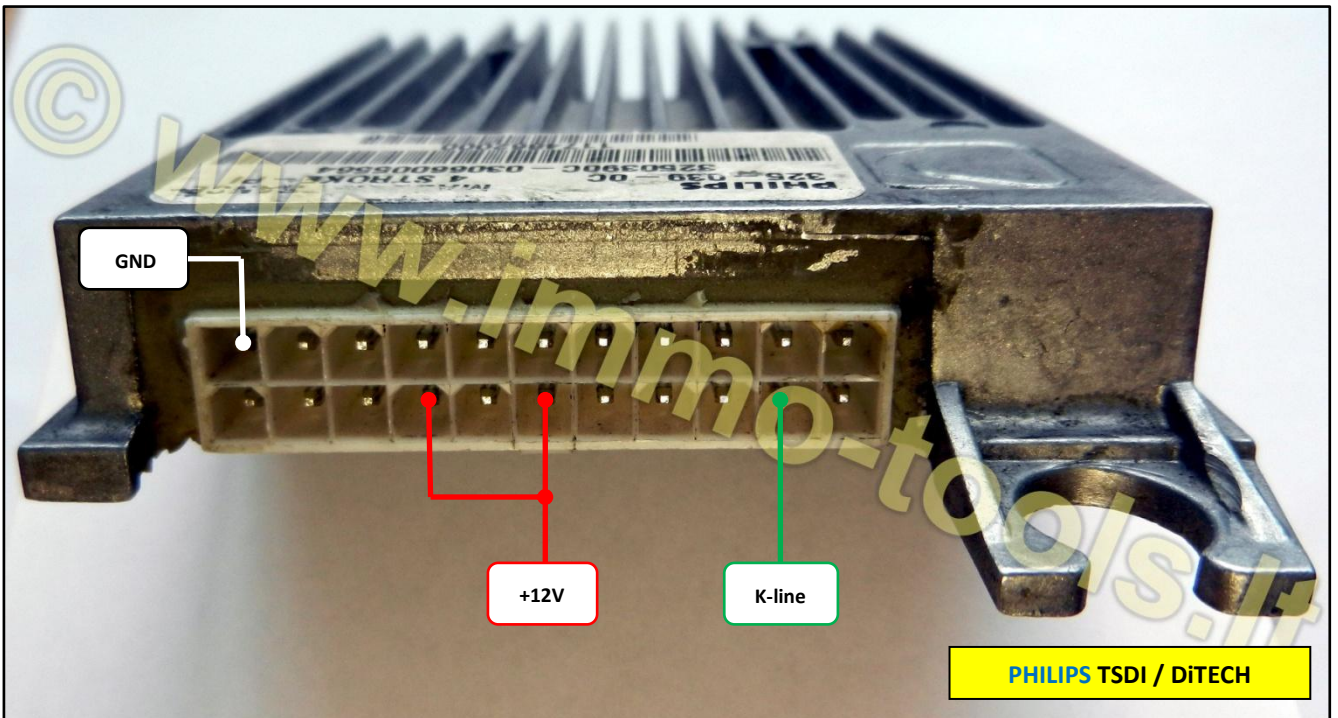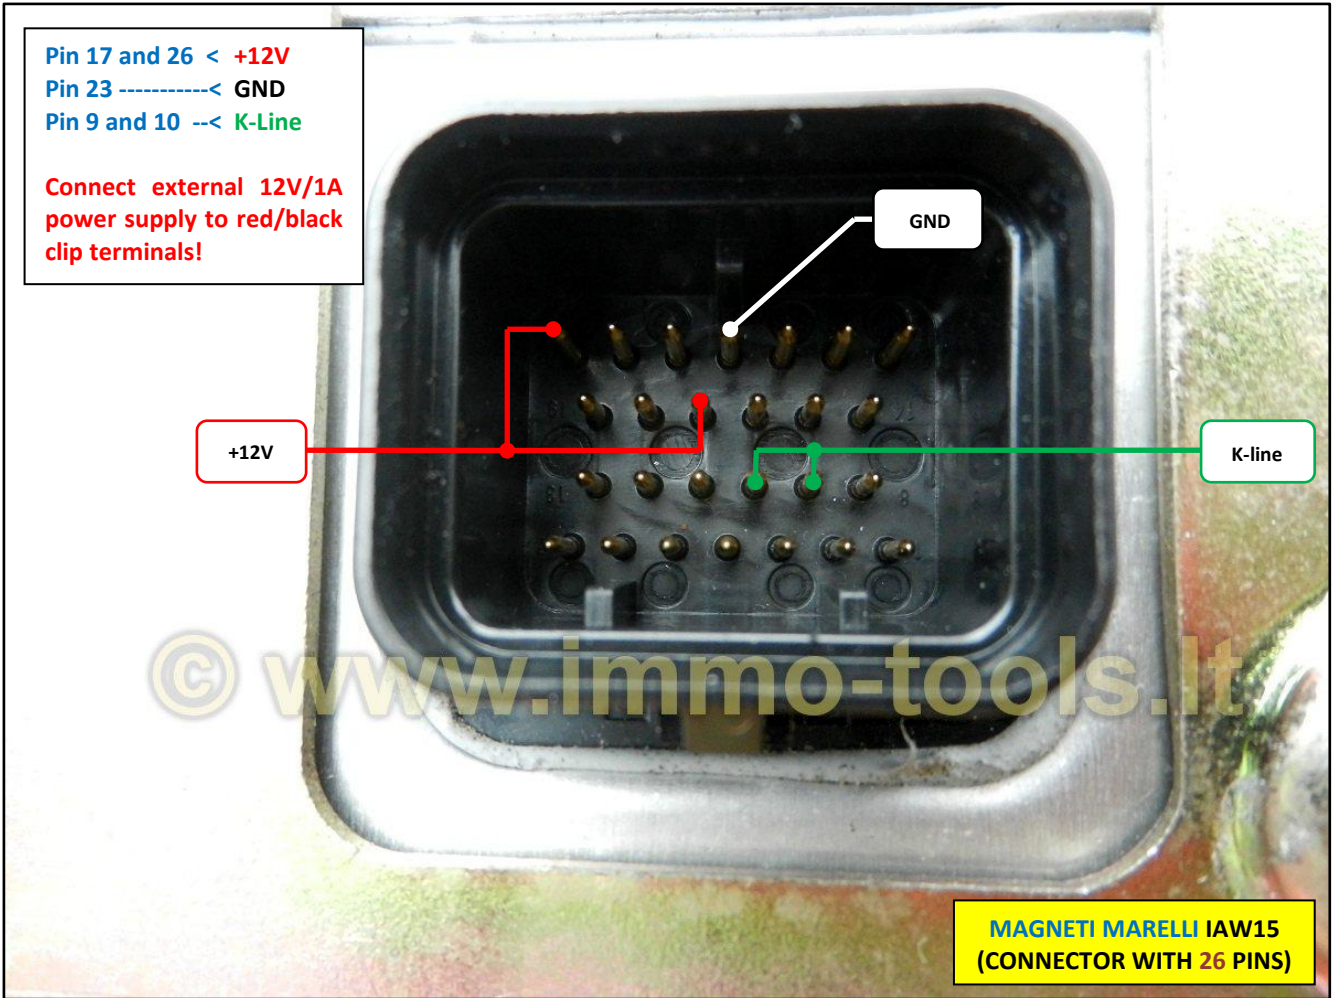

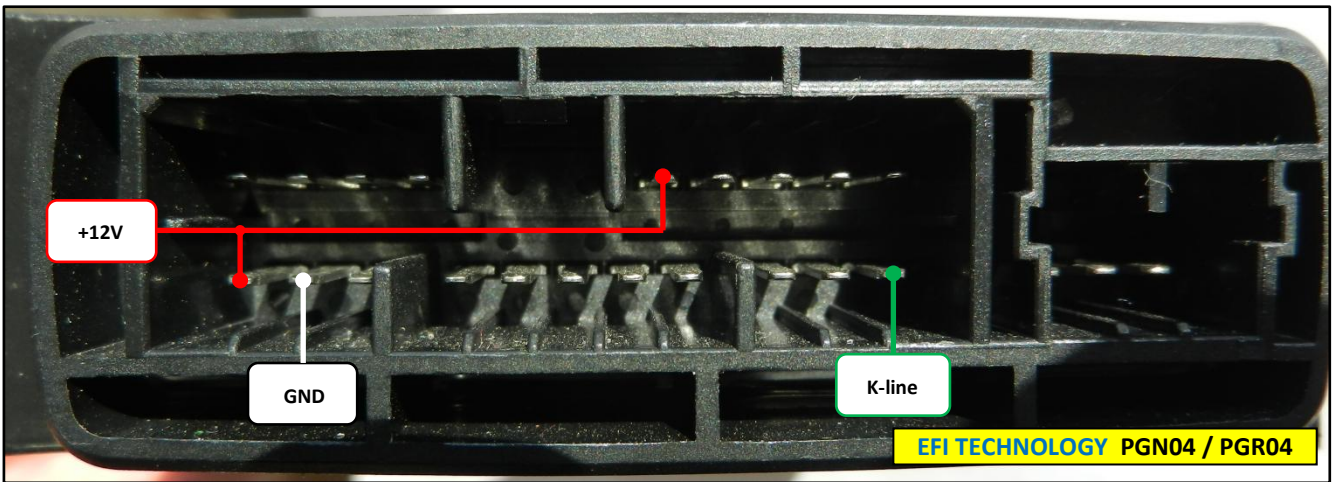

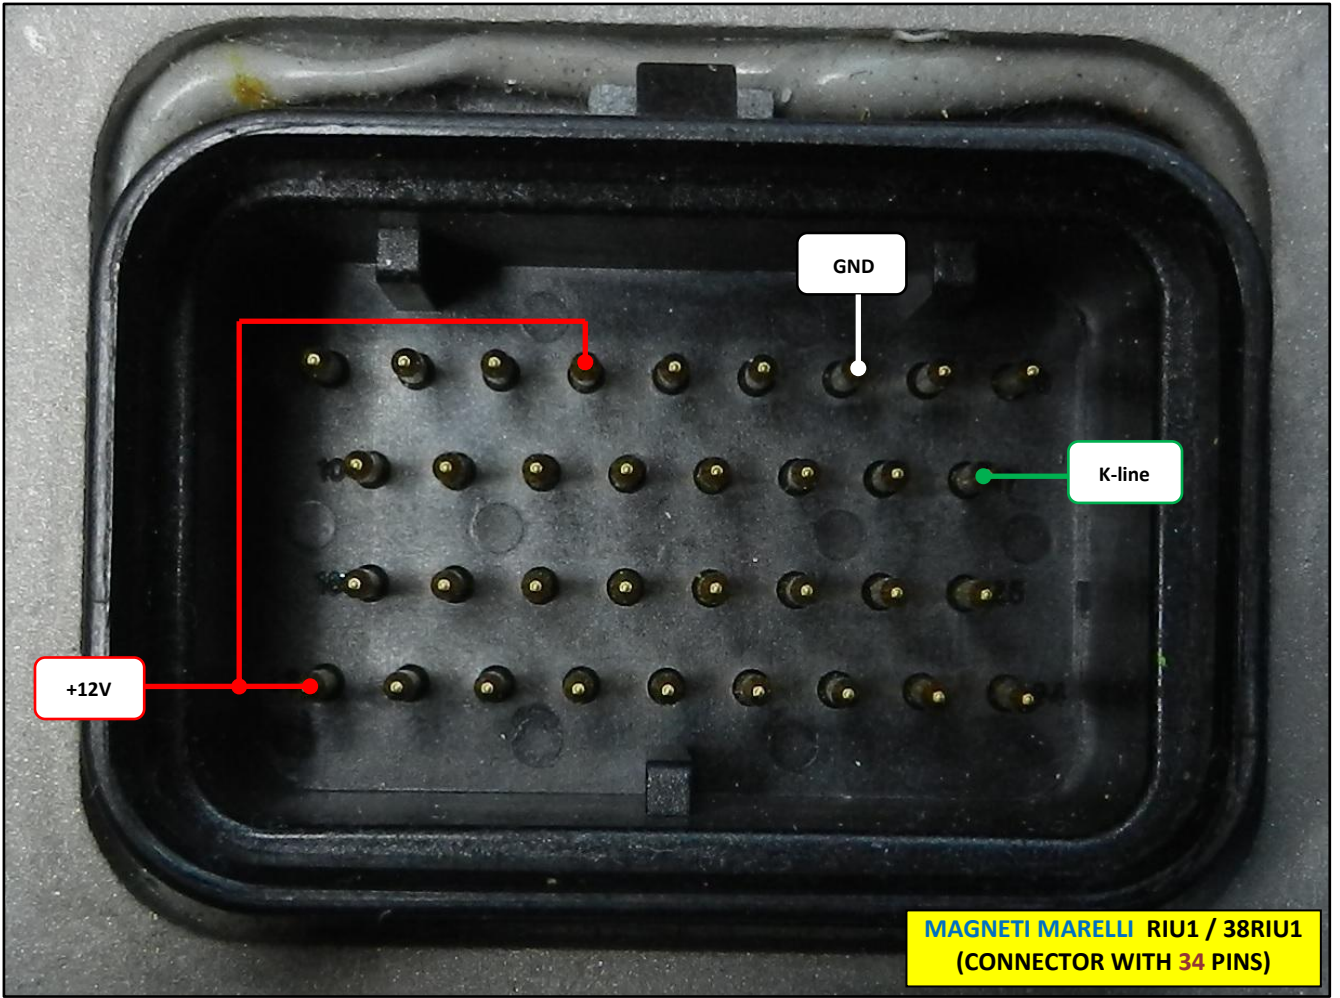

MAGNETI MARELLI RIU1 / 38RIU1
(CONNECTOR WITH 34 PINS)